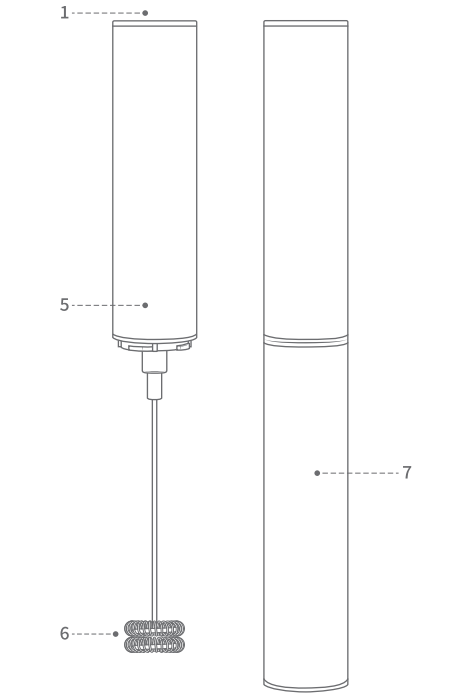 
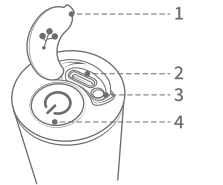 
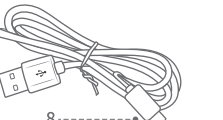 
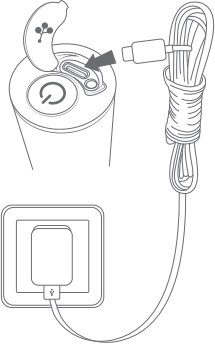 
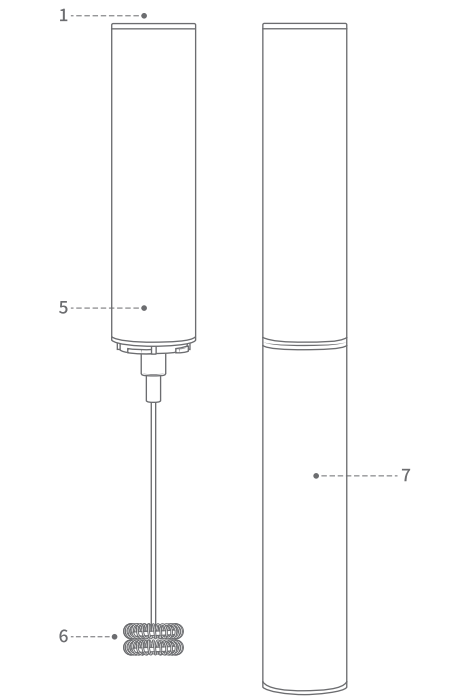 
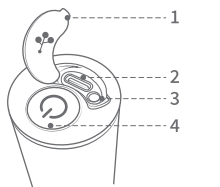 
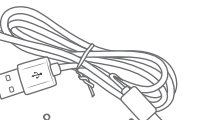 
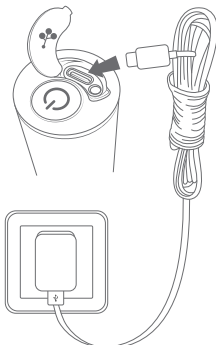 


 Percutti® ROSE GOLD COLLECTION  Espumador de Leche Milk Frother  ROTACIÓN ALTA VELOCIDAD HIGH SPEED ROTATION  ENCENDIDO - APAGADO ON-OFF BUTTON  LUZ INDICADORA INDICATOR LIGHT  STAINLESS STEEL ACERO INOX, STAINLESS STEEL  USB CARGA USB-C USB-C CHARGING  PFOA FREE	Thank you for purchasing the electric milk frother. BEFORE USING FOR THE FIRST TIME To ensure safety and maintain the high quality of the product, we recommend that you read and follow the instructions carefully. • Do not immerse the main body of the product in water or any other liquid to avoid harm to human or the product. • Keep body parts (e.g. fingers) and utensils away from the whisk when it is working. • Keep this product away from children. • Do not dismantle the product by yourself, or otherwise warranty will be invalid. • Do not use acidic, alkaline or other abrasive detergent to clean the product. • No extended use is allowed. • Keep away from flammable, explosive gas. • Using the product in any manner not described in these instructions releases the manufacturer from all liability.  This appliance, its cords and batteries can be recycled. TO DROP OFF IN SHOP  OR TO BE DEPOSITED AT A WASTE CENTRE    +  +  → 	PRODUCT DESCRIPTION  1. Dust Plug 2. Charging Socket 3. Indicator Light 4. Button 5. Main Body 6. Whisk 7. Protective Cover 8. Type-USB C Charging Cable  	HOW TO CHARGE • After moving aside the dust plug, insert the charging cable interface into the Type-C charging socket at the top of the frother. • Insert the adaptor into an indoor electric socket, the charging indicator light lights up in red, indicating it is charging normally. • The indicator light lights up in green,when the battery is fully charged. • It takes about 2.5 hours to fully charge the battery.  CAUTIONS • This is a lithium-battery rechargeable product. When not in use, it is recommended to charge every three months to ensure service life of the battery. • Adapter is not included with this product. Charge with UL/GS or equivalent safety approved adapters with output voltage of 5V . • Before connecting to the power source, ensure the adapter, charging cable plug, and the charging port on the device are completely dry. • Always disconnect the device from the power supply if it is to be left unattended. • Before each use, check that the appliance and cord are in good condition. Never use the appliance if the cord is damaged.	HOW TO USE • Remove the protective cover, press the button, the frother starts working. • Press the button again, the frother stops working.  CAUTIONS • This product is specifically designed for frothing milk to enhance your coffee experience. Please note that using this product for purposes other than its intended use may result in damage to the device. • After use, do not rinse the product directly, as water may enter the main unit and cause damage. It is recommended to immerse the frother's whisk in a cup of water and press the button to stir for easy cleaning. • When not in use, store the product in a clean and dry place. • The whisk is non-detachable. Do not try to detach or touch the whisk under working condition. • It is recommended that the continuous working time of this product should not exceed 3 minutes. TROUBLESHOOTING If the frother does not work or stops during frothing: • Please recharge it and then try again. (Note: It is not recommended to use the product while charging.) If the above operations are all correct and the frother still works abnormally, please contact the vendor for maintenance service.
Gracias por comprar el espumador de leche eléctrico. ANTES DE USAR POR PRIMERA VEZ Para garantizar la seguridad y mantener la alta calidad del producto, le recomendamos que lea y siga atentamente las instrucciones. • No sumerja el cuerpo principal del producto en agua ni en ningún otro líquido para evitar daños a las personas o al producto. • Mantenga las partes del cuerpo (por ejemplo, los dedos) y los utensilios alejados del batidor cuando esté funcionando . • Mantenga este producto fuera del alcance de los niños. • No desmonte el producto usted mismo, de lo contrario la garantía quedará invalidada. • No utilice detergentes ácidos, alcalinos o abrasivos para limpiar el producto. • No se permite el uso prolongado. • Mantener alejado de gases inflamables y explosivos. • El uso del producto de cualquier forma no descrita en estas instrucciones exime al fabricante de toda responsabilidad.  Este aparato, sus cables y baterías pueden reciclarse. A DEJAR EN LA TIENDA  o A DEPOSITAR EN UN CENTRO DE RESIDUOS    +  +  → 	DESCRIPCIÓN DEL PRODUCTO  1. Tapón antipolvo 2. Toma de carga 3. Indicador luminoso 4. Botón 5. Cuerpo principal 6. Batir 7. Funda protectora 8. Cable de carga Tipo-USB C  	CÓMO CARGAR • Después de apartar el tapón antipolvo, inserte la interfaz del cable de carga en la toma de carga Type-C situada en la parte superior del vaporizador. • Inserte el adaptador en una toma eléctrica interior, el indicador luminoso de carga se enciende en rojo, indicando que se está cargando normalmente. • El indicador luminoso se ilumina en verde cuando la batería está completamente cargada. • La batería tarda unas 2,5 horas en cargarse completamente.  PRECAUCIONES • Este es un producto recargable con batería de litio. Cuando no se utilice, se recomienda cargarla cada tres meses para garantizar la vida útil de la batería. • El adaptador no se incluye con este producto. Cargue con adaptadores homologados UL/GS o equivalentes con una tensión de salida de 5 V. • Antes de conectarlo a la fuente de alimentación, asegúrate de que el adaptador, el enchufe del cable de carga y el puerto de carga del dispositivo estén completamente secos. • Desconecte siempre el aparato de la red eléctrica si va a dejarlo sin vigilancia. • Desconecte siempre el aparato de la red eléctrica si va a dejarlo sin vigilancia.	CÓMO USARLO • Retire la tapa protectora, pulse el botón y el vaporizador comenzará a funcionar. • Si se vuelve a pulsar el botón, el espumador deja de funcionar.  PRECAUCIONES • Este producto está diseñado específicamente para espumar leche y mejorar su experiencia con el café. Tenga en cuenta que el uso de este producto para fines distintos a los previstos puede dañar el aparato. • Después del uso, no enjuague el producto directamente, ya que el agua podría entrar en la unidad principal y causar daños. Se recomienda sumergir el batidor del espumador en una taza de agua y pulsar el botón para remover para facilitar la limpieza. • Cuando no se utilice, guarde el producto en un lugar limpio y seco. • El batidor no es desmontable. No intente desmontar ni tocar el batidor en condiciones de funcionamiento. • Se recomienda que el tiempo de funcionamiento continuo de este producto no supere los 3 minutos. SOLUCIÓN DE PROBLEMAS Si el espumador no funciona o se detiene durante la formación de espuma: • Por favor, recárguelo y vuelva a intentarlo. (Nota: No se recomienda utilizar el producto mientras se está cargando). Si todas las operaciones anteriores son correctas y el vaporizador sigue funcionando de forma anómala, póngase en contacto con el vendedor para solicitar un servicio de mantenimiento.	 Distribuido por / Distributed by: Marketeam Options S.L. CIF: B-82882473 C/ Igarsa 13C Pol. Igarsa 28860 Paracuellos del Jarama, Madrid (España) www.percutti.com   It is a registred trademark by Marketeam Options S.L. 