



Información sobre la eliminación de **Residuos para Consumidores de Aparatos Eléctricos y Electrónicos**. Este símbolo indica que este producto no debe tratarse como un residuo doméstico normal y que debe reciclarse. Por favor, llévalo a su centro de recogida más cercano. No se recomienda para niños menores de 12 años, y se recomienda que los niños mayores de 12 años lo utilicen en compañía de adultos.

## ESTRUCTURAS DE PRODUCTO

|                                                                                                                                                                                                                                                                                                                     |                                                                                                                                                                                                                                       |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p><b>-INTERRUPTOR DESLIZANTE</b><br/>Colocar el pan y empezar a tostar</p> <p><b>-RANURA PARA TOSTADAS</b></p> <p><b>-PANTALLA</b><br/>Muestra la cuenta atrás del tostado.</p> <p><b>-INTERRUPTOR GIRATORIO</b><br/>Control del pardeamiento</p> <p><b>-BOTÓN DESCONGELAR</b></p> <p><b>-BOTÓN RECALENTAR</b></p> | <p><b>-BOTÓN CANCELAR</b><br/>Puede detener el tostado en cualquier momento</p> <p><b>-Función de recalentamiento</b><br/>30s-Calentar, recalentar el pan enfriado sin afectar el sabor.</p> <p><b>-Función de descongelación</b></p> |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

Information on **Waste Disposal for Consumers of Electrical & Electronic Equipment** This symbol indicates that this product should not be treated as normal household waste and it should be recycled. Please take it to your nearest collection facility.

It is not recommended for children under 12 years old, and it is recommended that children over 12 years old operate with the company of adults.

## PRODUCT STRUCTURES

|                                                                                                                                                                                                                                                                          |                                                                                                                                                                                                                  |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p><b>-SLIDE SWITCH</b><br/>Inset the bread and start to toast</p> <p><b>-TOAST SLOT</b></p> <p><b>-DISPLAY</b><br/>Show the countdown of the toasting.</p> <p><b>-ROTARY SWITCH</b><br/>Browning control</p> <p><b>-DEFROST BUTTON</b></p> <p><b>-REHEAT BUTTON</b></p> | <p><b>-CANCEL BUTTON</b><br/>You can stop the toasting at any time</p> <p><b>-Reheat Function</b><br/>30s-Heating, reheat the cooled bread.<br/>without affecting the taste.</p> <p><b>-Defrost Function</b></p> |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

defrost frozen bread before toasting if required. Browning control can control the heating time when you are defrosting.

## Growing Control

control the heating time to toast different taste of bread. 1-2 gear for light toast, 3-4 gear for golden toast, 5-6 gear for dark toast. It also controls the defrost time.

## INSTRUCTIONS BEFORE USE

Makes sure that the plug and wire are not damaged, and use the correct voltage.

Perform no-load heating once or twice to evaporate the moisture in the machine before the first time you use it.

Do not use it near as, oven, microwave or any other hot and flammable things.

Use it under the condition that the operation of the machine can be supervised in the whole process.

Do not use it outdoors on rainy days or in places that are likely to cause forest fires.

During the heating process, don't use the metal tableware to touch it, and the bread can only be taken after the heating is done.

## INSTRUCCIONES DURANTE SU USO

No añada nata, mantequilla ni ningún otro condimento inflamable al pan que vaya a tostar. Esto puede provocar que el pan tenga riesgo de incendio.

No introduzca el pan envuelto en papel de aluminio, celofán o cualquier utensilio en la máquina para tostarlo.

Recuerde instalar primero la bandeja cuando empiece a tostar.

Cuando la máquina esté funcionando, no toque la superficie para evitar quemaduras.

No lo cubra con nada cuando esté funcionando.

Manténgalo ventilado y aléjese de materiales inflamables como cortinas, ropa, toallas, etc.

Cuando esté trabajando, evite que el cable esté cerca de la superficie caliente.

Si desea realizar otro tostado después de terminar el primero, se recomienda hacer una pausa de 3 minutos para restablecer la función de protección contra sobrecalentamiento. De lo contrario, el tiempo de tostado será menor.

## INSTRUCTIONS DURING USE

- Do not add cream, butter or any other flammable condiments to the bread that needs to be toasted. This may cause the bread to have a risk of fire.
- Do not put the bread wrapped in aluminum foil, cellophane or any utensils into the machine to toast.
- Remember to install the tray first when you start toasting.
- When the machine is working, do not touch the surface to avoid burns.
- Do not cover it with anything when it is working.
- Keep it ventilated and stay away from flammable materials such as curtains, clothes, towels, etc.
- When it is working, avoid the wire close to the hot surface.
- If you'd like to have another toasting after you finish the first one, it is recommended to make a 3-minute break to reset the overheating protection function. Otherwise, the toasting time will be shorter.

## INSTRUCCIONES DESPUÉS DE USO

• Cuando termine de calentarse, desenchúfelo y enfríelo antes de limpiarlo.

• Para evitar daños en las piezas de la máquina, no limpie las migas que queden en la máquina con herramientas afiladas.

• No utilice limpiadores abrasivos ni cepillos metálicos para limpiarlo.

• Cuando limpie la superficie, hágalo con una toalla seca o de papel, no la enjuague con agua y no sumerja ninguna parte de la máquina en agua.

• Deseche las migas de la bandeja y límpiela. Las migas que quedan en el tostador pueden quemarse sacudiendo la máquina.

## CÓMO ALMACENAR

Guárdelo en un lugar ventilado, seco y sin polvo, utiliza una funda protectora para evitar el polvo.

## INSTRUCTIONS AFTER USE

- When the heating is done, pull out the plug and cool down before cleaning.
- To prevent damage to machine parts, do not clean up the crumbs left in the machine with sharp tools.
- Do not use abrasive cleaners or metal brushed to clean it.
- When wiping and cleaning, wipe the surface with a dry towel or paper towel, do not rinse with water, and do not immerse any parts of the machine in water.
- Discard the crumbs on the tray and clean the tray. The crumbs left in the toaster can be poured out by shaking the machine.

## HOW TO STORE

store it in a ventilated, dry and dust-free environment, use a protective cover to prevent dust

## POSIBLES PROBLEMAS

...Cuando tostamos una rebanada de pan, el trozo de pan no se tuesta uniformemente.

**Razón:** Cuando la máquina está encendida, el cable calefactor empieza a calentarse. Como hay dos cables calefactores en el centro de la máquina, el lado cercano al centro de la máquina recibirá el doble de calor cuando tueste un trozo de pan, por lo que quedará más oscuro que el otro lado.

**Solución:** Recomendamos utilizar la máquina cuando esté completamente cargada, para que el calor recibido por ambas caras del pan sea más uniforme y el color del tostado sea más homogéneo.

...La máquina emite humo durante el proceso de tostado.

**Motivo y solución 1:** La temperatura del modo seleccionado es demasiado alta para el pan que está tostando. Cancelelo y cambie a un modo suave.

**Motivo y solución 2:** La máquina no está limpia, hay migas pegadas en la superficie caliente. Limpie y reinicie.

**Motivo y solución 3:** La bandeja está llena de migas, lo que provoca el calentamiento. Limpie y reinicie.

**Motivo y solución 4:** Un alto contenido de aceite y de azúcar en el pan provocará humo al calentarlo. Elija un pan saludable.

## POSSIBLE PROBLEMS

1. When we toast one slice bread, the piece of bread is not toasted evenly.

**Reason:** When the power is on, the heating wire starts to heat. While there are double heating wires in the center of the machine, the side close to the center of the machine will receive double heat when you toast a piece of bread, so that it will be darker than the other side.

**Solution:** We recommend that use the machine when it is fully loaded, so that the heat received on both sides of the bread will be more even, and the toasted color will be more even.

2. The machine emits smoke during the toasting process.

**Reason and solution 1:** The temperature of the selected mode is too high for the bread you are toasting. Cancel it and change a gentle mode.

**Reason and solution 2:** The machine is not clean, there are crumbs stuck on the hot surface. Clean up and restart.

**Reason and solution 3:** The tray is full of crumbs, which cause the heating. Clean up and restart.

**Reason and solution 4:** High oil content and high sugar content in the bread will cause smoke during heating. Choose a healthy bread.

3. When just started to toast, the bread pops out immediately.

**Reason:** It maybe the pressing lever is not pressed to the end, and the machine is not energized and gets to work.

**Solution:** Please try it again, if it is still the case, please contact us directly.

4. The machine is powered off after selecting other functions during heating.

**Reason:** When the normal gear is pressed, the heating work is already in process, then enter the countdown. During this process, if you select another function, it will count the consumed time into the total time of the new function. If the toasting time has exceeded the corresponding time of the stall, the machine will be powered off.

**Reheat:** Fixed 30s heating time.

## BROWNING CONTROL

6 Settings allow you to toast your bread the way you like.  
The sugar and oil content of the bread may affect the colour of the bread, the actual colour of the toast may vary depending on the type of bread.

